



Water temperature regulation

In a regulation cycle, the system first generates water flow through the heater housing and the plumbing, in order to ensure accurate water temperature readings as well as avoiding heater activation in dry conditions.

After verifying pump activation and taking a water temperature reading if required, the system automatically turns the heater on to reach and maintain water temperature at Set Point.

- ❖ The "Heater" indicator lights up when the heater is on. It flashes when there is a request for more heat but the heater has not yet started.

Troubleshooting



Hr

An internal hardware error has been detected in in.xe. Contact dealer or service supplier.



HL

The system has shut the heater down because the temperature at the heater has reached 119°F (48°C). Do not enter the water! Remove the spa cover and allow the water to cool down, then shut power off and power your spa up again to reset the system.



AOH

Temperature inside the spa skirt is too high, causing the internal temperature in the in.xe to increase above normal limits. Open skirt and wait until error clears.



FLO

The system does not detect any water flow while the primary pump is running. Check and open water valves. Check for water level. Clean filter. If the problem persists, call your dealer or service supplier.



Prr

A problem is detected with the temperature probe. Call your dealer or service supplier.



OH

The water temperature in the spa has reached 108°F (42°C). Do not enter the water! Remove the spa cover and allow the water to cool down to a lower temperature. Call your dealer or service supplier if problem persists.

Smart Winter Mode

Our Smart Winter Mode protects your system from the cold by turning pumps on several times a day to prevent water from freezing in pipes.

- ❖ The "Filter" indicator flashes when the Smart Winter Mode is on.

Cooldown

While performing this task, the heater is not allowed to turn on and its icon flashes.



k-92-in

series of k-92 keypads for in.xm spa systems



The Quick Reference Card provides a quick overview of your spa's main functions and the operations accessible with your digital control pad.

Spa functions




Key 1 (Pump 1)

Press Key 1 key to turn Pump 1 on at low speed. Press a second time to turn pump to high speed (with a dual-speed pump). A third time turns pump off.

A built-in timer automatically turns pump off after 20 minutes, unless pump has been manually deactivated first.

- ❖ The "Pump 1" indicator lights up when Pump 1 is on.
- ▲ With dual-speed pump, indicator will flash when Pump 1 is on at low speed.

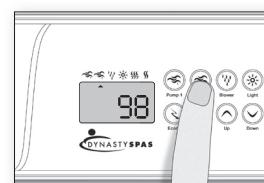

Key 2 (Pump 2) (2 Pump System)

Press Key 2 key to turn Pump 2 on at low speed. Press a second time to turn pump to high speed (with a dual-speed pump). A third time turns pump off.

A built-in timer automatically turns pump off after 20 minutes, unless pump has been manually deactivated first.

- ❖ The "Pump 2" indicator lights up when Pump 2 is on.
- ▲ When Pump 2 is on.



Blower key

Press Blower key to turn blower on. Press Blower Key again to turn off. A built-in timer automatically turns blower off after 20 minutes, unless blower has been manually deactivated first.

- The "blower" indicator lights up
▲ when Pump 2/blower is on.



Light key

Press Light key to turn light on. Press a second time to turn light off. A built-in timer automatically turns light off after 2 hours, unless it has been manually deactivated first.

- The "Light" indicator lights up
▲ when light is on.



Econo key

Press Econo key to switch from Normal mode to Economy mode. To save energy, the Economy mode Set Point is 20°F (11°C) below the Normal mode Set Point. The display toggles between "Eco" message and the current water temperature.

Press Econo key again to go back to Normal mode. The display shows "noE" message for 3 secs.



Up/Down keys

Use Up or Down key to set desired water temperature. The temperature setting will be displayed for 5 seconds to confirm your new selection.



Programming the filter cycles

To program the filter cycles, you must enter these parameters: duration and frequency. During a filter cycle, pumps & blower run at high speed for one minute to purge the plumbing. Pump 1 or CP then runs at low speed for the remaining of the cycle.



Setting filter cycle duration

Press and hold Filter key until the display shows dxx, with "xx" representing the duration in hours. (Default: 2 hours).

Use Up or Down key to change setting.

0 = no filtration

24 = continuous filtration

Note: it's not recommended to set this to "0".




Filter cycle frequency

Press Filter key again. The display will show Fx, with "x" representing the number of filter cycles per day (up to 4). (Default: twice a day).

Use Up or Down key to change setting.

When the desired setting is displayed, press Filter key to confirm. A filter cycle will start immediately.

- The "Filter" indicator lights up
▲ when a filter cycle is on.

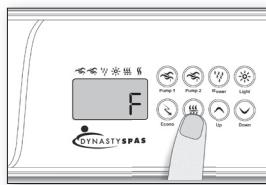

Setting the temperature display units

Press Filter key once more. The display will show either °F or °C.

Use Up or Down key to change units.

Press Filter key a last time to go back to normal mode.

°F = Fahrenheit - °C = Celsius